

Bartallama3D

<https://Bartallama3D.design>

Unifi Flex Camera Bracket **Assembly Instructions**

Overview

Thank you for purchasing a Bartallama3D mounting bracket compatible with the Unifi Flex camera!
Below you will find the assembly instructions for the mounting bracket and instructions for installing it in a compatible housing.

If you run into any issues during assembly or have additional questions, please reach out to us at hello@Bartallama3D.design.

1-Gang Camera Bracket


Compatible Housing




The 1-Gang camera bracket is compatible with 1-Gang electrical boxes and 1-gang low voltage brackets. Using a 2-gang+ box, round box, or metal 1-gang plate is not supported.

Assembly

To assemble the camera bracket, (1) install 1 washer on each of the the included metal hex screws and (2) thread those screws through the clamp. Do not fully tighten yet. The clamp is designed to have a small gap(3) closer to the 1-gang face plate and the top of the clamp should sit flush (4) with the top of the protrusion on the camera mounting plate. Below is a visual representation of the bracket from the side. A reference image is provided to the left which shows the side that is being represented in the diagram below.

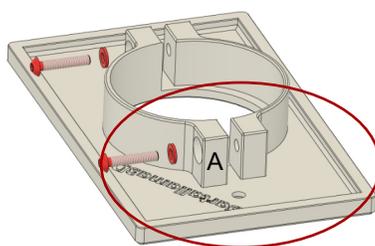

3D Reference view

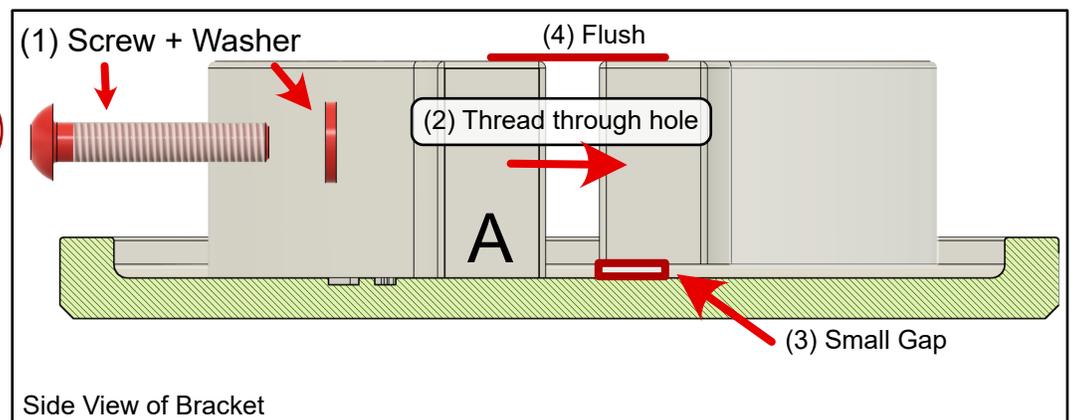


Side View of Bracket

Next, Insert the Unifi Flex Camera into the bracket. The camera needs to be installed from the inside/top of the unit (1) due to the small bump found on the camera body.




(1) Install direction

Adjust the camera up/down to the preferred installation height. The camera can be installed in a way that either covers the small LED light or hides it. Once you have set the height on the camera in the housing, tighten the two previously installed screws (2) to grip the camera body snug. The camera bracket assembly is complete after this step and is ready for installation in a compatible 1-gang electrical box.

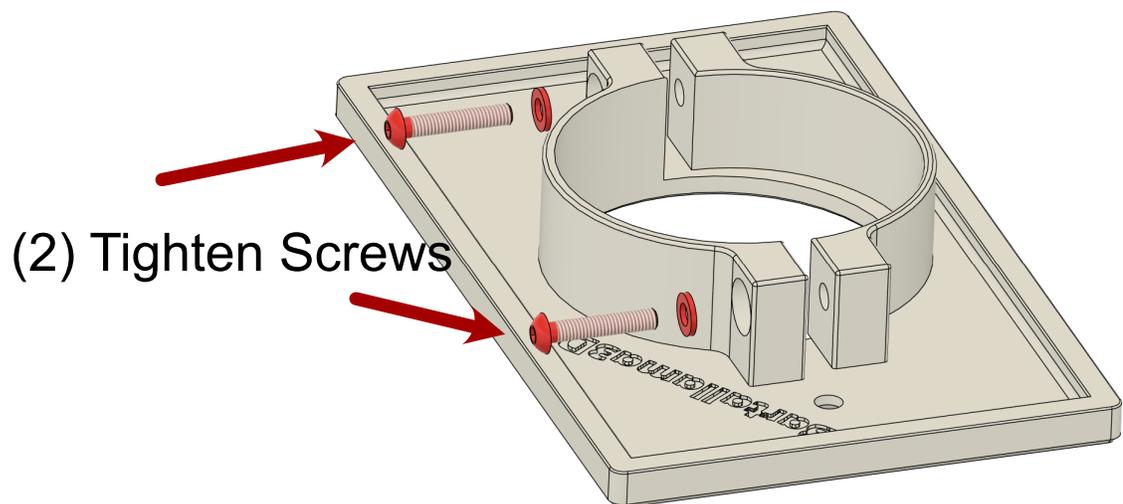

To install in a compatible electrical box, plug the camera into your network cable inside of the electrical box (this should already be done prior to camera installation). Insert the assembled camera bracket into the electrical box and install the two included white flat head screws (1) into the corresponding holes on the front of the face plate.

(1) Install 2x white flat head screws (included)

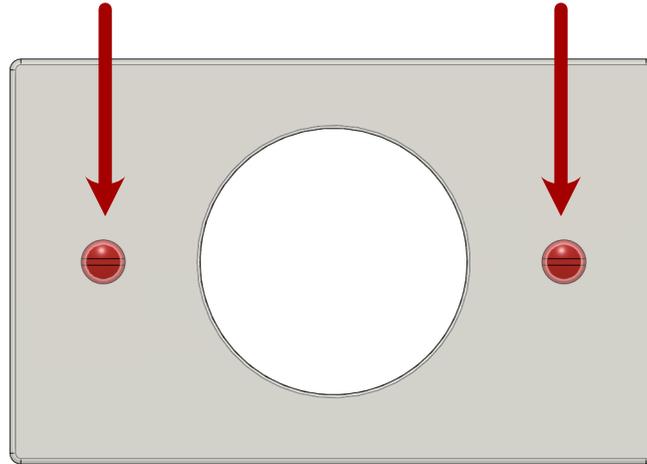

**This concludes the assembly
and installation of the
1-gang camera bracket!**

Happy surveilling

